


# COIL REPLACEMENT COMPANY

## INSTALLATION, OPERATION & MAINTENANCE MANUAL HVAC/R COILS

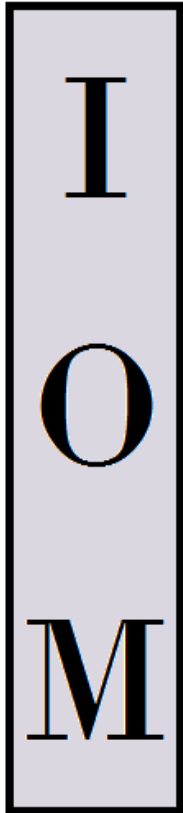

### Table of Contents:

PG.2	Overview / Warranty
PG.3	Water Coil Installation Recommendations
PG.4	Steam Coil Installation Recommendations
PG.5	Refrigerant Coil Installation Recommendations
PG.6	Installation Checklist
PG.7	General Mounting Diagram, General (Fluid Coil) Installation Diagrams
PG.8	General (Steam Coil) Mounting & Installation Diagrams
PG.9	General (Evaporator Coil) Mounting & Installation Diagrams
PG.10	Maintenance
PG.11	Freight Damage Policy



## HVAC & INDUSTRIAL COILS AND HEAT EXCHANGERS

---

This manual covers the basic installation, operation and maintenance recommendations for coils manufactured by Coil Replacement Company.

Always follow local codes and standards for the installation of equipment and coils for the area in which the coils are to be operated. Following are recommendations for the installation of products manufactured by Coil Replacement Company. Please read this manual completely before installing and operating coils manufactured by Coil Replacement Company including the suggested maintenance on page 8. Care should be taken when handling Coil Replacement Company to avoid damage or personal injury.

Failure to observe these recommendations could result in premature failure of the product and / or loss of the warranty provided. Coil Replacement Company will repair or replace any product determined to have failed due to a manufacturing defect after proper evaluation of the product and installation methods have been completed. Please see complete Warranty Statement below.

Coil Replacement Company reserves the right to request information concerning the installation of products it manufactures and / or the return of failed products to our facility for evaluation of the failure before any warranty will be considered.

A Return Authorization Number (RA#) must be requested before the coil is returned to our manufacturing facility. Any product returned without RA # will not be accepted and all charges for the shipment of the coil will be the shipper's responsibility. The product must be crated such to prevent any damage from occurring during shipment. Any product without sufficient crating that allows damage to the product to occur will not be accepted and no warranty will be provided.

### **Warranty**

The Seller warrants to the original user of its manufactured product against defects in material and workmanship for a period of one year from the date of shipment provided the equipment has been correctly installed, applied, and operated under intended design conditions. The Seller's obligation under this warranty is limited to repair or replacement, at Seller's option, of any product, that upon Seller's examination at its factory shall appear to have become defective. Correction of such defects by repair or replacement, plus return freight via lowest common carrier, shall constitute fulfillment of obligations to the buyer. The Seller will accept no expense, liability, or responsibility for repairs made outside the factory by others without prior written approval. In any event and at no time shall the expenses or liabilities arising from the sale of the equipment by the Seller exceed the original net cost of the material sold. Warranty covers material only and not labor required to replace or install.

## Water Coil Installation Recommendations

1. Piping should be in accordance with accepted industry standards. Always use a back up wrench on the coil connections when attaching the piping to the coil if pipe thread connections are utilized.
2. When drainable coils are desired, tubes should be installed in a horizontal position. Use a spirit level. If the tubes cannot be installed level, special drain headers are available on request.
3. Connect the water supply to the bottom connection on the air leaving side and the water return to the top connection on the air entering side.
4. When four connections are provided the extra bottom connection can be used for an auxiliary manual drain connection, and the extra top connection can be used for an automatic air vent or the extra connections can be capped. Connecting the supply and/or return in any other manner will result in very poor performance.
5. Water coils are not normally recommended for use with entering air temperatures below 40°F. Glycol solutions or brines are the only freeze-safe media for operation of water coils for low entering air conditions.
6. When fresh and return air are to be heated or cooled by a water coil, care should be used in the design of the ductwork to insure thorough mixing before the air enters the coil. The return air should always enter the bottom of the duct. Fresh air should enter the top of the duct. The greater the distance between the points of mixing and entrance to the coil, the better the application.
7. Two position control valves, modulating valves, three way valves or a combination of these controls can accomplish control of water coils. Follow the recommendations of the control manufacturer regarding types, sizing and locations. Face and bypass dampers may also be used, but do not close off tightly. Air leakage in cooling applications has no appreciable effect. In heating applications, however, the air temperature may rise several degrees and should be considered in system design. Low leakage dampers may be required.
8. Pipe sizes for the system must be selected on the basis of the head [pressure] available from the circulating pump. It is recommended that the velocity should not generally exceed 8 feet per second and that the friction loss should be approximately 3 feet per 100 feet of pipe.
9. When cooling coils are banked two or three high, an intermediate drain pan with plastic drain tubes extending into the main drain pan should be installed on the air leaving side of each coil. On high latent installations, the condensate draining from top coils may load the lower coils with condensate, resulting in reduced air flow and performance or condensate being blown downstream into the ductwork. All individually installed water cooling coils and the bottom of all cooling coil banks should be mounted in drain pans extending at least ten inches from the leaving air edge of the coil. A drain line trap must be installed to allow condensate to drain freely. The drain line trap depth must be twice the negative static pressure of the operating system for the unit to drain correctly. Incorrect trapping can cause the drain pan to overflow.

Note: Vent and Drain connections are provided on Coil Replacement Company water coils unless otherwise specified. This allows the coils to be drained. Keep in mind that when draining the coils, all water may not drain from the coil. In order to completely drain the coil to prevent the possibility of freezing during cold ambient temperatures, air or nitrogen pressure must be utilized to blow any remaining water from the coil.

## Steam Coil Installation Recommendations

### A. General

1. Provide separate supports and hangers for the coil and for the piping. Always use a back up wrench on coil connections when attaching piping to the coil. Coils not designed with pitched casing or fin pack must be pitched ¼" per foot towards the return connection at installation.
2. Be certain that adequate piping flexibility is provided. Stresses resulting from expansion of closely coupled piping and coil arrangement can cause serious damage.
3. Do not reduce pipe size at the coil return connection. Carry the return connection size through the dirt pocket, making the reduction at the branch leading to the trap.
4. Vacuum breakers and air vents must be installed on all applications to prevent retaining condensate or air in the coil. Generally the vacuum breaker is to be connected between the coil inlet and the trap. For a system with a flooded return main, the vacuum breaker should be open to the atmosphere and the trap design should allow venting of large quantities of air.
5. Do not drip steam mains through coils.
6. Insure steam pressure and condensate line pressure differential is sufficient to allow efficient condensate removal from the steam coil, especially when using modulating steam control valves to control the leaving air temperature of the coil.
7. Do not attempt to lift condensate without the assistance of a condensate pump. The pressure required to lift condensate must also be considered for sufficient pressure differential. Check valves are also required to prevent reverse flow of condensate back into the coil.
8. Entering air temperatures should not be below 40° F to insure freezing doesn't occur.

### B. Traps

1. Size traps in accordance with the manufacturer's recommendations. Be certain that the required pressure differential will always be available. Do not undersize.
2. Float and thermostatic traps are recommended for high or low-pressure steam systems, but bucket traps may be used. Float and thermostatic traps should be used when air venting is necessary. Bucket traps are recommended for use with on-off control only. It is recommended that traps be located at least 12 inches below the coil return connection. When traps without air venting capabilities are used, air vents are required in the system.
3. Multiple coil installations-
  - a. Each coil or group of coils that is individually controlled must be individually trapped.
  - b. Coils in series; separate traps are required for each coil, or bank of coils, in series.
  - c. Coils in parallel; a single trap may be used but an individual trap for each coil is preferred.

### C. Control

1. With coils arranged for series airflow, a separate control is required on each bank, or coil, in the direction of airflow.
2. On high-pressure installations, a two-position steam valve with a face and by-pass arrangement is preferred where modulating control is required.
3. Modulating valves must be sized properly—DO NOT OVERSIZE.

## Refrigerant Coil Installation Recommendations

Refrigeration coils manufactured by Coil Replacement Company are shipped with a small nitrogen holding charge. Care should be taken when opening these coils for installation. DX coil distributors have caps installed with soft silver solder. Once the cap is removed and if the TEV is to be installed using anything other than soft solder, the distributor connection should be sufficiently cleaned with emery cloth to remove the soft solder. Follow accepted refrigeration piping practices and safety precautions per ASHRAE Standards. If bends or 90's are necessary, long radius fittings must be used to keep the pressure drop through the piping at a minimum. Nitrogen charged and capped piping is recommended.

### A. Liquid Line Sizing

All compressors have a Refrigerant Charge Limit [RCL] that must not be exceeded. Since the RCL and pressure drop are in direct conflict with each other, Coil Replacement Company recommends that the liquid line be sized as small as possible, while maintaining a low enough pressure drop to ensure 5°F of sub-cooling at the expansion valve.

### B. Liquid Line Components

Coil Replacement Company recommends the use of a properly sized liquid line filter-drier, installed upstream from the expansion valve and as close to the evaporator coil as possible. Filter-drier selection should be based on a maximum pressure drop of 2 psi at the design condition. A moisture indicator / sight glass should be installed between the expansion valve and filter-drier. The moisture indicator / sight glass must be sized to match the size of the liquid line at the thermal expansion valve. A liquid line shut-off valve with an access port should be sized with the selected liquid line OD, and installed close to the condenser, the use of other valves, tube bends and reducers should be minimized, since these items tend to increase pressure drop and to reduce sub-cooling at the expansion valve. Liquid line receivers, other than those factory-installed, are not recommended.

The Thermal Expansion Valve [TEV] must be selected for proper size, capacity and refrigerant being used. A slightly oversized valve will allow the unit to operate satisfactorily at low-load conditions. An undersized valve should not be used at any time as this will starve the evaporator of refrigerant causing insufficient air temperatures. The use of a hot gas bypass valve should also be considered when sizing the TEV. Select expansion valves with external equalizer connections, and those designed to operate against a backpressure of 20 pounds per square inch higher than actual evaporator pressure.

The TEV must be installed directly on the evaporator coil liquid line connection provided. The liquid distributor must be in a vertical position. Insure that the distributor nozzle is installed in the distributor if required and that the correct nozzle for the refrigerant being used is installed. Sensing bulbs must be mounted on a clean horizontal suction line close to the evaporator outlet and insulated properly. The bulb must be tight against the suction line at a 10 or 2 o'clock position, but take care not to over tighten and cause damage to the sensing bulb. The bulb should not be mounted directly on top or bottom of the suction line.

**CAUTION:** Disassemble the thermal expansion valve before completing the brazing connections. If necessary, wrap the valve in a cool wet cloth while brazing. Failure to protect the valve from high temperatures may result in damage to the internal components.

### C. Suction Line Sizing

Suction line tubes must be sized to maintain refrigerant vapor velocities that are high enough to ensure good oil return to the compressor under all operating conditions. It is necessary to pitch horizontal suction lines toward the compressor to insure sufficient oil return to the compressor. Traps should be provided at the bottom of suction line risers and at 15 foot intervals for sufficient oil return.

### D. Suction Line Components




A suction line pressure tap should be installed on the leaving side of the evaporator coil near the TEV sensing bulb location. Accurate superheat measurement and TEV adjustment demands that suction pressure and temperature be measured near the evaporator coil outlet. Suction line filter-driers are usually only necessary on systems that have experienced a severe compressor motor burn out or other failure that results in extremely high refrigerant temperature. This filter-drier should not be left in the suction line permanently. Suction lines should be insulated completely with sufficient wall thickness insulation for the application temperature range being utilized.


## Installation Checklist

Use the following checklist to verify that all necessary installation procedures have been completed.

1. Coils are installed with airflow in same direction as indicated on the coil nameplate or casing.
2. Suction connection is at the bottom of the suction header on the evaporator coil, suction line is pitched towards compressor and traps are installed in suction risers. Suction line is insulated with correct wall thickness insulation for the temperature application utilized.
3. If stacking coils, stacking channels are properly installed and bypass air is prevented.
4. Condensate drain pans and piping is installed with a trap in the condensate line and piping insulated and heated if installed in applications that are below freezing.
5. Clean filters are installed upstream of the condenser coil when applicable.
6. A liquid line filter-drier is installed upstream of the expansion valve.
7. A moisture indicator/sight glass is installed between the expansion valve and filter-drier.
8. A liquid line shutoff valve with access port is installed close to the condenser.
9. A schrader valve is installed in the suction line close to the evaporator coil outlet.
10. The TEV, with external equalizer connections, is installed directly on the evaporator liquid connection, sensing bulb mounted in the horizontal position on the suction line and insulated. The liquid distributor must be in a vertical position.
11. Piping system is leak-tested with dry nitrogen, evacuated to 500 microns, and charged with correct refrigerant type and amount.
12. Superheat and sub cooling measurements are taken. Thermal expansion valve is adjusted to obtain desired superheat. Desired superheat on most applications is 8° to 12° at the outlet of the evaporator.


## General Mounting Diagram

	Horizontal Air Flow Horizontal Tubes	Level with the y-axis and x-axis.
	Vertical Air Flow <sup>2</sup> Horizontal Tubes	Level with the z-axis and x-axis.
	Horizontal Air Flow Vertical Tubes	Level with the y-axis and x-axis.

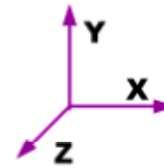


## General (Fluid Coil) Installation Diagrams


### Horizontal Airflow

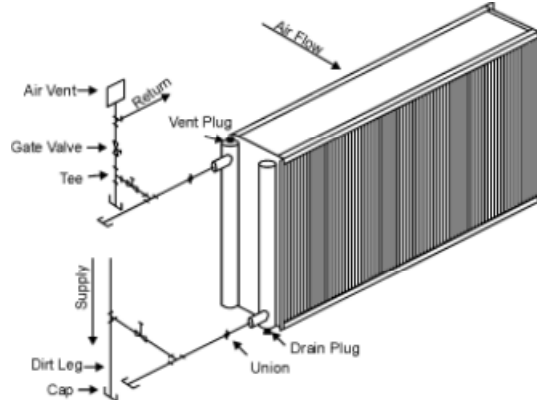

### Vertical Airflow

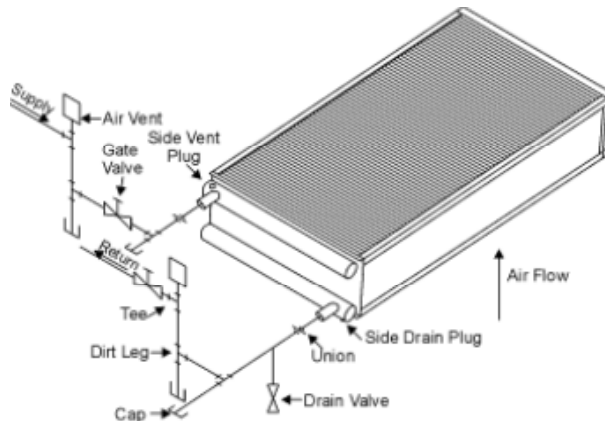



**General (Steam Coil) Mounting & Installation Diagrams**

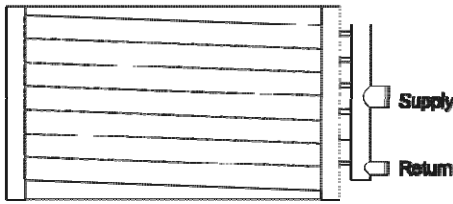


Pitched Casing




Unpitched Casing (field pitched)

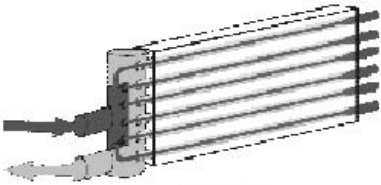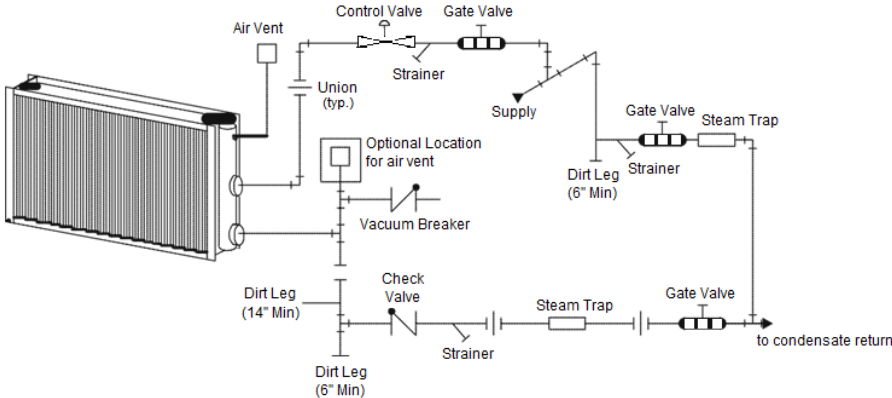

Distributing Type  
Same End

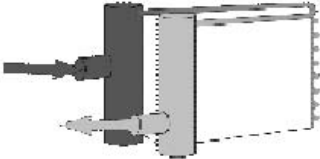


Standard Steam  
Same Side

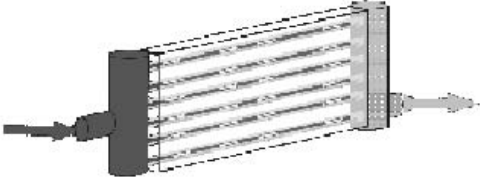


Distributing Type  
Opposite End



## General (Evaporator Coil) Mounting & Installation Diagrams

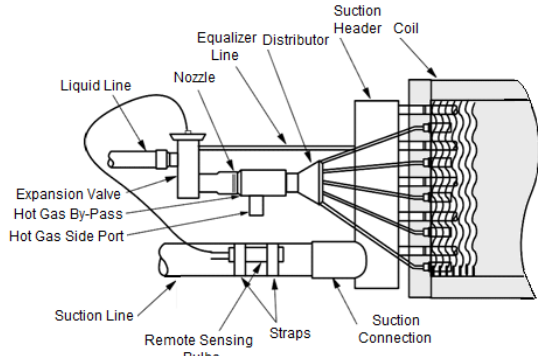


General DX Coil with Hot Gas By-Pass

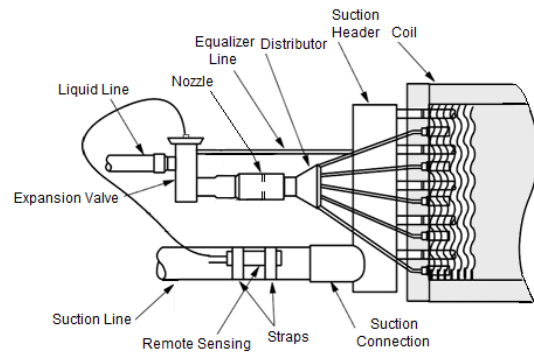


General DX Coil

### Distributor

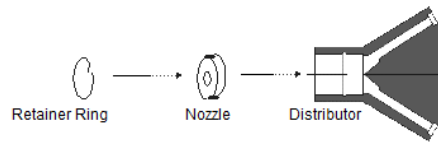

### Mounting

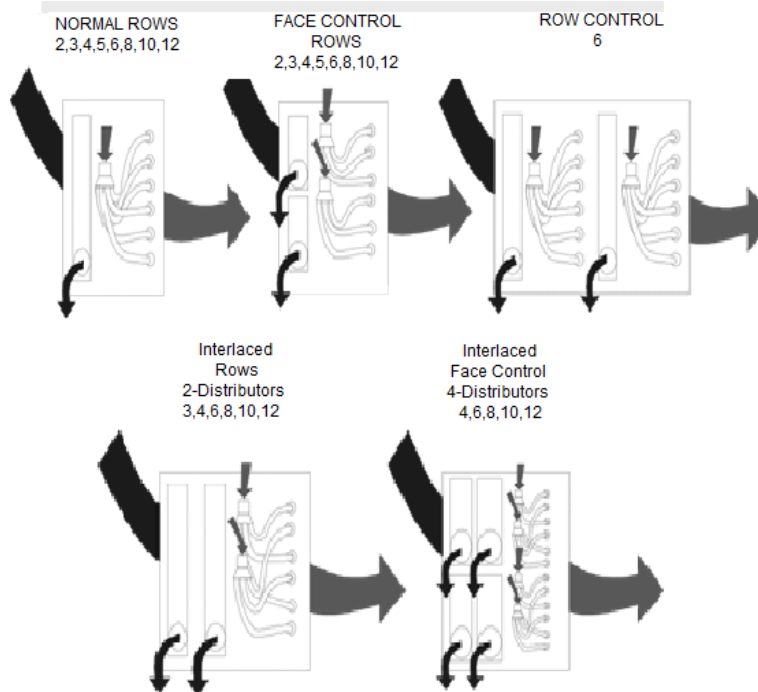

## Maintenance

### Coil Cleaning

Coils should be kept clean to maintain maximum performance. For operation at its highest efficiency, the coil should be cleaned often during periods of high cooling demand or when dirty conditions prevail. Power should be disconnected and locked out and motors should be covered to insure that no moisture penetrates into the windings causing motor failure if applicable.

Remove large debris from the coils and straighten fins before cleaning.

Clean refrigerant coils with cold water and detergent or with one of the commercially available chemical coil cleaners. Rinse coils thoroughly after cleaning.

**CAUTION:** Do not clean the coil with hot water or steam. The use of hot water or steam as a refrigerant coil-cleaning agent will cause high pressure inside the coil tubing and subsequent damage to the coil.

**CAUTION:** Do not use acidic chemical coil cleaners. Do not use alkaline chemical coil cleaners that, after mixing, have a pH value greater than 8.5 without also using an aluminum corrosion inhibitor in the cleaning solution. Failure to follow these guidelines or the manufacturer's instructions for use of cleaning chemicals could result in damage to the unit.

**WARNING:** SOME CHEMICAL COIL-CLEANING COMPOUNDS ARE CAUSTIC, AS WELL AS TOXIC. USE THESE SUBSTANCES ONLY IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY, DEATH OR EQUIPMENT DAMAGE.

### Fin Straightening

Coil fins may have been bent during shipping or servicing, and should be straightened to maintain maximum heat transfer. Reduction of the effective coil surface will correspondingly reduce coil capacity. Always check fin appearance after any handling of the coil and after any servicing is done near the coils.

Fin combs are sized according to number of fins per inch of the coil. For relatively small bends that require only minor repair, other tools may be used to evenly space the fins. Be careful not to damage the coils.

### Steam Coil Applications

A steam trap maintenance program should be implemented to insure that steam traps are operating correctly and at maximum efficiency. Failure to do so could result in premature failure of the coil and loss of warranty due to condensate backing up into the coil causing leaks or allowing the coil to freeze during low ambient conditions if supply air drops below 40° F.

**Note:** Steam distributing coils may also be called "NON-FREEZE" coils. These coils will freeze if temperatures drop below the freezing point. Care should be taken to insure that these coils are not operated at or below freezing temperatures. If there is the possibility that the coils will experience freezing temperatures, freeze safeties should be installed in the system to prevent damage to the coils. Any coil that has failed due to freezing temperatures will not be covered under the standard warranty.

## Freight Damage Policy

Freight terms for Coil Replacement Company are F.O.B. factory. This means the seller is not responsible for damages or losses to equipment in transit. Although not legally bound, should damages or problems occur, Coil Replacement Company will offer assistance to purchasers provided the purchaser adheres to the following criteria.

### Freight Delivery Information

When truck drivers arrive, do not let them rush you. Do not sign anything until you inspect your crate/box/carton very carefully for damage upon receipt.

Look for any indentations in box, protruding nails in crates, fork lift damage to piece. Even if outside package is acceptable, look very carefully inside to check the product. Sometimes it is difficult to see damage without taking the product(s) out of the packaging. If there is any question in your mind that there is possible damage you can't see, or concealed damage, mark "DAMAGED" on the freight bill. Do not make the mistake of assuming the package is ok. You are only protecting your own interests.

### IF THE FREIGHT IS DAMAGED – PLEASE DO THE FOLLOWING!

1. Do not refuse shipment unless completely necessary!

Refusal of a damaged shipment simply puts everything in limbo. Freight goes back to the terminal and sits there.

2. Accept shipment and sign freight bill – make sure you note the damage on the freight bill. NOTE: Accepting a damaged shipment does not hold you liable in any way unless "DAMAGE" fails to appear on the freight bill.\*

If shipment is not noted as damaged on the freight bill, Coil Replacement Company will not be responsible for the repair cost as we cannot file a damaged claim with the carrier. As far as the trucking company is concerned, the freight was received free and clear of all damage and they will not be held accountable for the repair charges.\* It is the responsibility of the receiver to sign the bill as damaged and make certain that someone will be held responsible to get your product fixed at no charge to you.

3. Do not move the damaged piece from the area in which it was received. Do not discard any packaging, even if it is coming apart. A damaged shipment must have an inspector look at it before anything can be done with it. If the piece is moved, the inspector can blame the damage on you, claiming possible damage when moved. If the packaging is not available, the inspector can claim faulty packaging.

4. Telephone Coil Replacement Company Immediately

Coil Replacement Company can start by getting in touch with the carrier to have an inspector come over to look at shipment. We can also get a preliminary damage report from you, the customer, in order to have accurate, reliable information before an inspector gives his report. We can also answer any questions or concerns you might have.

5. After inspection has been completed, telephone Coil Replacement Company

As soon as inspection has been completed, we can begin steps to get your product repaired or replaced.

\* Concealed Damage: Damage not noted on freight bill. The standard allowance from freight motor carriers on this type of claim is 25% of the total claim amount.